



HS-10 Quick Reference Guide



WARNING:
THIS PRODUCT CONTAINS LITHIUM ION
BATTERIES. SEE OWNER'S MANUAL FOR
HANDLING AND SAFETY INSTRUCTIONS.

WARNING:
HIGH LEVEL OF SOUND CAN BE EMITTED.
HEARING PROTECTION RECOMMENDED.
TEMPORARY OR PERMANENT HEARING
DAMAGE MAY OCCUR.

Ultra
ELECTRONICS

Ultra Electronics—USSI
4868 E Park 30 Dr
Columbia City, IN 46725
Phone: 260-248-3665
ServiceDepartment@ultra-ussi.com


HYPERSPIKE
Sound that Moves

HS-10 Quick Reference Guide

For full product manual, see
<http://www.ultra-hyperspike.com/HS-10>.

OPERATION:

Press and hold the Power Button (E) for one second to turn the HS-10 on and off.

Alert Tone:

- 1.Set volume knob (F) to desired level
- 2.Press and hold Alert Tone Button (C)

Note: Alert Tone has priority over live voice, record playback, and line input.

Record/Playback:

- 1.Plug microphone into 'Mic Input' (H)
- 2.Select Record/Playback mode with button (G)
- 3.Set volume knob (F) to desired level
- 4.Press and hold microphone key switch (K)
- 5.Speak loudly and clearly into microphone
- 6.Release microphone key switch (K). Unit will automatically playback recorded message.

Note: To stop playback, press and release microphone key switch (K) rapidly.

Live Voice Mode:

- 1.Plug microphone into 'Mic Input' (H)
- 2.Select Live Voice mode with button (G)
- 3.Set volume knob (F) to desired level
- 4.Press and hold microphone key switch (K)
- 5.Speak loudly and clearly into microphone

Note: If the Live Voice audio squeals, choose Record/Playback mode, reduce volume, or move microphone further away from the unit.

Charge Internal Battery:

- 1.Plug charger into Charge Port (J)

Note: Unit will not function while charger is plugged in. Remove charger to resume operations.

Line Input:

- 1.Plug auxiliary player (MP3/phone/etc.) into 'Line Input' (D)
- 2.Set output volume of auxiliary player to high
- 3.Set volume knob (F) to desired level
- 4.Press play on auxiliary player to broadcast

STATUS INDICATORS:

When the HS-10 is initially powered up, the status indicators (A & B) will briefly turn on for system initialization. Refer to chart for status indicator codes.

Status Indicator (A):



- Solid Green – Unit ready to operate with full battery
- Flashing Green – Unit ready to operate with low battery
- Solid Yellow – Charger connected - Unit in Standby mode - Fully charged
- Flashing Yellow – Charger connected - Unit in Standby mode - Charging
- Solid Red – Fault – See manual or contact authorized service facility

Mode Indicator (B):

- Solid Green – Unit in Record/Playback mode
- Solid Red – Unit in Live Voice mode

ILLUSTRATION LEGEND:

- A. LED Status Indicator (Status/Charge/Fault)
- B. LED Mode Indicator (Record/Playback or Live Voice mode)
- C. Alert Tone Button (triggers alert tone)
- D. Line Input (line input connector for MP3 player/phone/etc.)
- E. Power Button (turns HS-10 on and off)
- F. Volume Knob (adjusts system volume)
- G. Mode Button (cycles mode between Record/Playback and Live Voice)
- H. Microphone Input (microphone input connector)
- J. Charge Port (battery charge connector)
- K. Microphone Key Switch

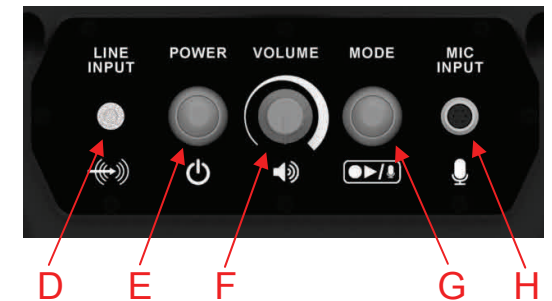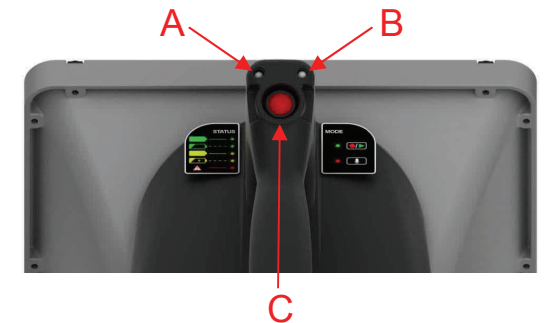

90199A-QRG-HS10 REV C